

SRF04 Connections

- 5v Supply** —
- Echo Pulse Output** —
- Trigger Pulse Input** —
- Do Not Connect** —
- 0v Ground** —

